

INSTALLING VERTICAL BLADE DAMPERS

Contact TAMCO CUSTOMER SERVICE for possible configurations not shown.


SINGLE-SECTION VERTICAL BLADE DAMPER ▼

- > TAMCO recommends that single-section vertical blade dampers be installed so that linkage is located at the top.
- > The actuator should be mounted on the drive rod which extends beyond the bottom of the damper.
- > The lower frame of the damper must be properly braced and supported.



TWO-SECTION VERTICAL BLADE DAMPER ▼

- > Actuators must be mounted on the drive rods.
- > Damper sections may be connected with a jumper.
- > If sections are connected, the damper must be actuated from only one motor location, either the top or the bottom drive rod.
- > The lower frame of the damper must be properly braced and supported.

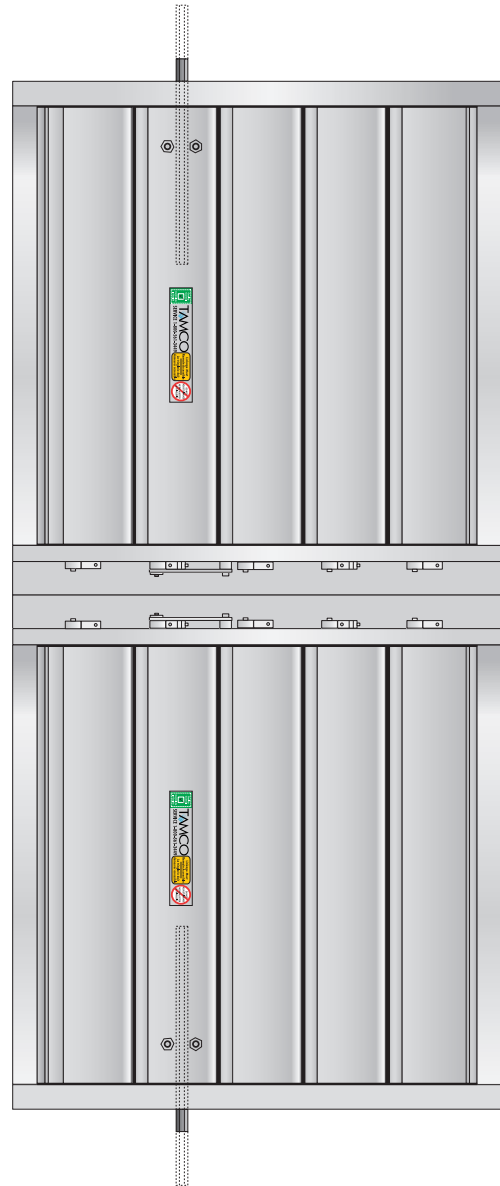

TAMCO WARRANTY ▼

- > TAMCO will honor its warranty if all of the above instructions are adhered to.